


Jeanjean

PA Mixer Amplifier

80W RMS/110W Max.

SSA-80U

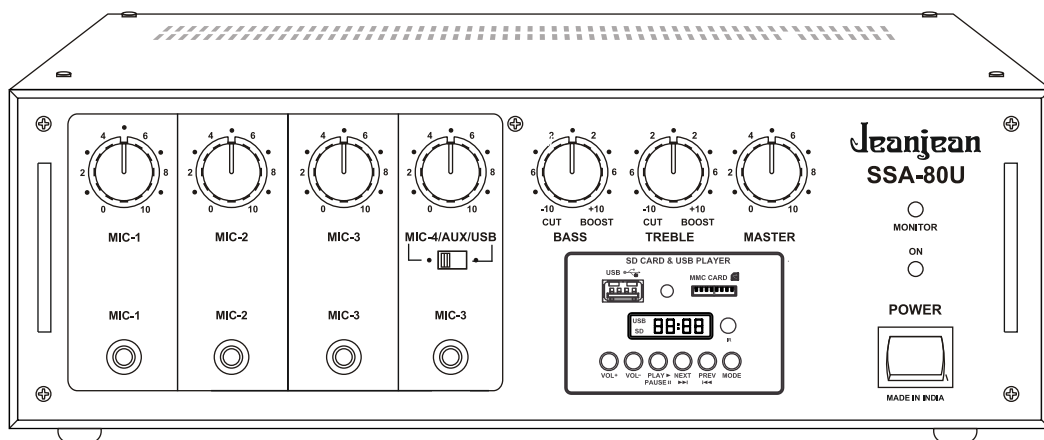


SSA-80U incorporates high-tech design and circuitry with high quality performance and absolute reliability.

FEATURES


- Provision for automatic changeover from AC to Battery Operation ensures continuity of program.
- 4-MIC & 1-AUX inputs
Mic-1 to Mic-3 are provided with individual Volume Controls. Volume Control for Mic 4 is alternate to Aux. The Aux input is for connecting Mixer, Cassette Player etc.
- BASS and TREBLE controls provided for shaping tonal quality of music & speech as desired.
- MASTER control permits adjustment of overall volume of program inputs.
- PRE-OUT for connecting Cassette Recorder for recording or for connecting additional Booster Amplifier.
- Protection against wrong battery polarity - provided.
- 100V line for long distance speakers connections.

-
- ♦ Thank you for purchasing the JeanJean P.A. Mixer Amplifier.
 - ♦ Please read this manual thoroughly before making connections and turning on the power. Following the instructions in this manual will enable you to obtain optimum performance from your new JeanJean P.A. Mixer Amplifier.
 - ♦ Please retain this manual for future reference.

FRONT & REAR PANEL CONTROLS & FEATURES

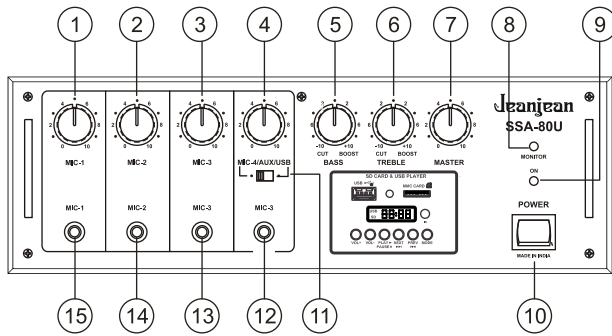

1. **MIC-1 Volume Control**
2. **MIC-2 Volume Control**
3. **MIC-3 Volume Control**
4. **MIC-4 / AUX Volume Control**
5. **BASS CONTROL**
For attenuating the signal level of low frequencies.
6. **TREBLE CONTROL**
For attenuating the signal level of high frequencies.
7. **MASTER CONTROL**
This acts as a GATE for overall opening of the volume level of the Amplifier.
8. **MONITOR LED**
This LED indicates the output level of Amplifier.
9. **POWER LED**
This LED glows when the amplifier is switched 'ON'.
10. **POWER Switch**
11. **MIC-4 / AUX / USB Selector Switch**
12. **MIC-4 Input Jack Socket**
For connecting Lo-impedance microphones.
13. **MIC-3 Input Jack Socket**

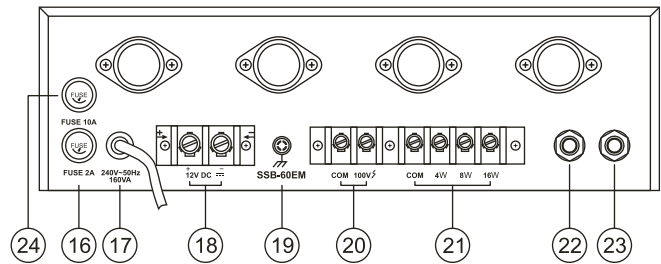

14. **MIC-2 Input Jack Socket**
15. **MIC-1 Input Jack Socket**
16. **AC MAINS FUSE 2 Amp 250V**
This prevents excessive current flow caused by any defect / short circuit in the amplifier.
17. **2 Core AC Mains Cable With Plug**
18. **BATTERY Terminal Block**
For connecting a 12V Car Battery as standby power source.
19. **EARTH Terminal**
20. **SPEAKER Terminal Block (100V line)**
For connecting Column Speakers / Driver Units with 100V line matching transformers.
21. **SPEAKER Terminal Block (4Ω, 8Ω and 16Ω)**
For connecting low impedance speakers.
22. **PRE-OUT Jack Socket**
For connecting to Cassette Recorder or Booster.
23. **AUX Input Jack Socket**
For connecting Cassette Player, CD Player, Echo Mixer or Audio Mixer etc.
24. **DC MAINS FUSE 10 Amp**

GUIDELINES TO OPERATE THE AMPLIFIER

1. Place the amplifier in dry and well ventilated place. Considerable heat is generated inside the amplifier during continuous use, therefore do not block the top cover ventilation holes by placing anything on top of the amplifier.
2. Only good quality Low Impedance Microphones like JeanJean : PSM-580XLR, PUD-101, PUD-77DX are recommended to be used to avoid / reduce feedback & howling. This will help obtaining satisfactory power output from Amplifier without howling or feedback.
3. Driver Units, Column Speakers & Box speakers give best performance and are safe from damage when fed with up to half of their handling capacity. This is because these have to handle certain peak music signals and transients which may be two to three times higher than the power wattage being fed to these by Amplifier.
4. It is advised to keep the Master Control of the Amplifier at '0' position before switching 'ON' the amplifier & later may be moved to optimum position say '6 to 8'.

Caution


- The equipment must be earthed properly before operating it to avoid electric shock. A wire from the Earth Terminal must be connected to either water pipe or to electrical earth for safe operation.

SPEAKER CONNECTIONS


Low impedance speaker connections

Speaker impedance taps of 4, 8 and 16Ω have been provided at the rear. Always use 23/36 or thicker speaker cable to reduce power loss in the cables. Make proper matching speaker connection as explained below.


■Connecting two Speakers (like SRX-50DX) in parallel.

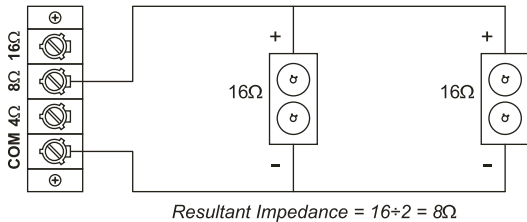


■Connecting two driver units (like PU-60) in parallel.

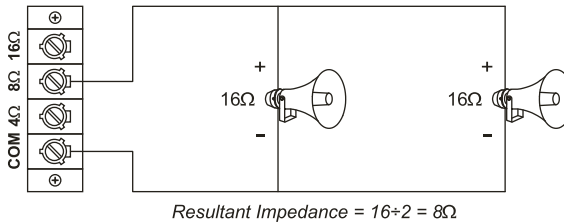

■Connecting four Speakers (like SCM-30) in parallel.

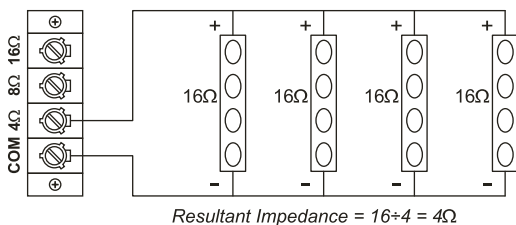


■Connecting four driver units (like PU-35 / PU-40) in a series - parallel combination.

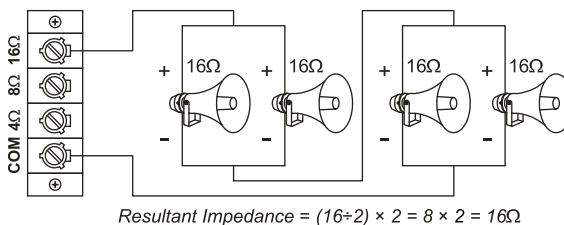


High Impedance (100V line) speaker connections

■Connecting 12 Column Speakers with 100V LMT connected at 5 watts tap.

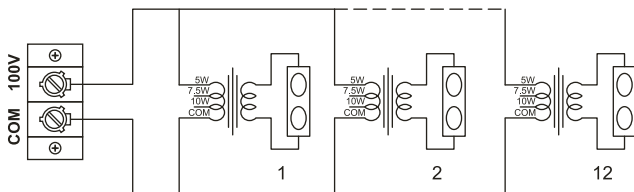

■Connecting 6 Driver Units with 100V LMT connected at 10 watts tap.

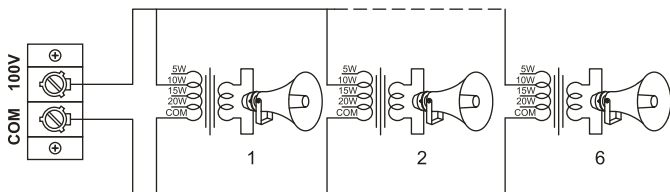

Correct Phasing of Loudspeakers

- When two or more Speakers / Units are installed in the same area and are facing the same direction, it is essential that their cones / diaphragms act in unison. Otherwise the sound level of one speaker will be canceling the sound level of the other. To avoid any mistake, the terminals of Box Speakers and the Driver Units are marked '+' & '-'. Always connect the COM of the Amplifier to '-' of speaker & 4Ω / 8Ω / 16Ω of the amplifier to the '+' of the speakers.
- In case of LMTs the COM of all the LMTs should be connected to the COM of the red terminal strip of the amplifier and the power tap to 100V line as shown in figure.

⚠ Caution

- When 100 Volt line is being used, no speakers / driver unit should be connected to 4Ω/8Ω/16Ω (Low Impedance) Tap.
- Loudspeaker / driver unit should be connected to either COM-4 Ω, COM-8Ω, COM-16Ω or COM-100V terminals, but never to more than one set of terminals.

SAFETY INSTRUCTIONS

■ Water and Moisture:

In order to prevent any fire or shock hazard, do not expose this equipment to rain or moisture.

■ Power Source:

The equipment should be connected to a 220-240V 50Hz AC or a 12V DC power source. For 220V AC operation, a tap on the power transformer is available, which should only be changed by authorised Ahuja dealer.

■ Power cord protection

Do not cut, kink, damage or modify the power cord supplied with the equipment. Keep the power supply cord away from heaters & harmful chemicals. Do not place heavy objects on the power cord.

■ Operation on Generator:

When operating the amplifier on a generator, make sure it is switched 'OFF' till the generator voltage has stabilized and then only switch the amplifier 'ON'.

■ Ventilation:

The amplifier should be situated so that its location or position does not interfere with its proper ventilation. Also do not insert or drop anything into the ventilation holes.

■ Prevention of loss in speaker cables:

Always use thick cables for low impedance speaker connections. Use of cable type 23/36 or thicker is recommended as heavy current flows through the cables.

■ Proper selection of Output Terminals:

When 100V line is being used, do not connect speakers to 4 Ω , 8 Ω or 16 Ω tap. Similarly do not connect speakers to 100V line when 4 Ω , 8 Ω or 16 Ω tap is being used.

■ Grounding or Earthing:

The equipment must be earthed properly before operating it to avoid electric shock. A wire from the Earth Terminal must be connected to either water pipe or to electrical earth for safe operation.

SPECIFICATIONS

Power Source	AC: 220-240V 50Hz DC: 12V (Car Battery)
Power Output	110 Watts RMS Max. 80 Watts RMS at 10% THD 75 Watts RMS at 5% THD
Output Regulation	≤ 2 db, no load to full load at 1kHz
Inputs / Sensitivities	4 $\times$ Mic 0.65mV / 4.7k Ω 1 $\times$ Aux 100mV / 470k Ω
Frequency Response	50Hz - 15000Hz ± 3 db
Tone Controls	Bass: ± 10 db at 100Hz Treble: ± 10 db at 10kHz
Signal to Noise Ratio	60dB
Pre-Amp Output	200 mV / 600 Ω
Speaker Output	4 Ω , 8 Ω , 16 Ω and 100V
Power Consumption	AC: 160VA DC: 3Amps (average)
Dimensions	W340 $\times$ H115 $\times$ D265 mm
Net Weight	7.0kg